

HT119B

Home Theatre System



TABLE OF CONTENTS

Warnings and Precautions	2
Important Safety Instructions	3
In the Box & Features	4
Powering the Unit	5
Changing the Remote Battery	5
Connecting the Speaker System/DVD Player	6
Connecting the Speaker System/DVD Player	7
Composite Video Output & S-Video Output	8
Component Video Output & Coaxial Audio Output	9
Programming a DVD or CD	10
Setup Menu	11
Locations of Controls & Definitions	12-19
Parts & Service Information	20

WARNINGS AND PRECATIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
 - **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
 - **WARNING:** The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
 - **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
 - **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
 - **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
 - **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
 - **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
 - **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
 - **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
 - **WARNING:** Lithium ion batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries. Tum que omante, vid pecesim axime! ingingultum pubitere comant. Casta,



CAUTION

 
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) OF THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

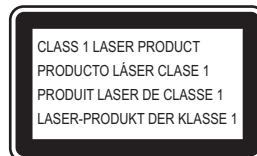

Class II equipment symbol

This symbol indicates that the unit has a double insulation system.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Grounding or Polarization - This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
16. Ventilation - Slots and opening in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surfaces. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
17. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
18. CAUTION: Use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.
19. CAUTION: Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam.
20. Do not place the subwoofer near a cathode-ray television (CRT) or other devices that are sensitive to magnetic fields.
21. Do not use headphones/earphones at high volume.
22. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
23. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the bottom of apparatus.
Les précautions d'emploi sont inscrites en bas de l'appareil.
- The marking information is located at the bottom of apparatus.
Les marquages sont inscrits en bas de l'appareil.

 
FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In the Box

- HT119B
- Remote Control
- Speaker Connection Cables
- A/V RCA Cables
- Documentation

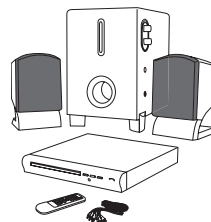

Features

2.1 Channel Speaker System

Full-Range Stereo Speakers

Subwoofer

--Rotary Bass and Volume Controls

--DVD/AUX Source Selector Button

Drawer-Load DVD Player

Plays DVD, DVD-R/RW, DVD+R/RW, CD, CD-R/RW

Plays JPEG Picture Discs

Multi-Language OSD: On-Screen Display in English, French & Spanish

Supports Multiple Languages and Language SubTitles

Fast-Forward / Fast-Backward / Slow Motion / Zoom

TV Display Aspect Ratio Conversion: 4:3 / 16:9

NTSC

Progressive Scan

Jacks

DVD Player:

--Video Out Jack, RCA type

--Progressive Scan Output

--Audio Out Jacks, L&R

--S-Video Output Jack

--Coaxial Digital Audio Output

Speaker:

--Audio-In L&R Jack, RCA type

--Stereo Line-In Jack for other Audio Players, 3.5mm type

--Aux-In Jack for other Audio Players, L&R RCA type

Full-Feature Remote Control for DVD

Uses 2-"AAA" Batteries, (not included)

 
AC-Powered:

DVD: 120V, Built-In AC Cord

SubWoofer: Built-In 120V AC Cord


Powering the Unit

To power the unit, plug the attached AC cord into a standard AC outlet (120V~60Hz)

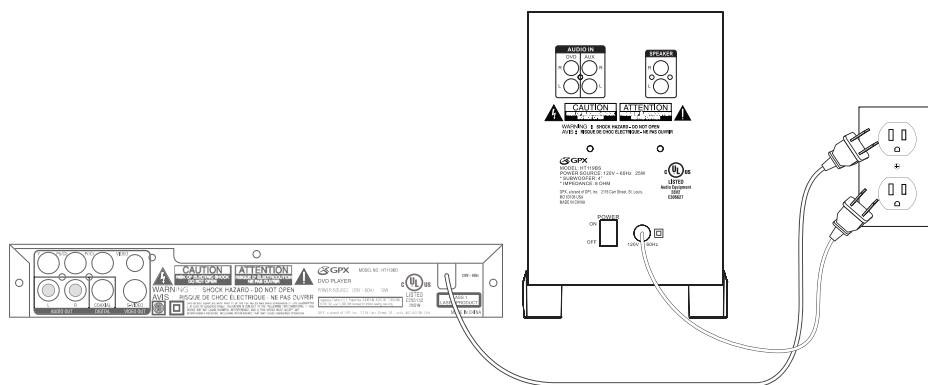

Changing the Remote Battery

 To power the remote battery, insert two AAA batteries into the battery compartment on the back of the remote.

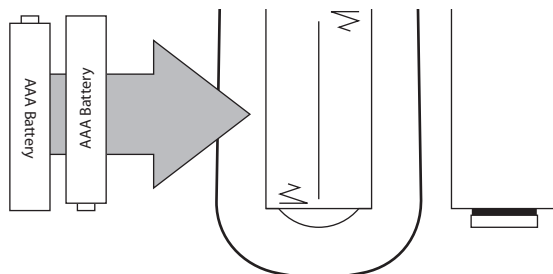


Connecting the Speaker System/DVD Player

Connect the external speakers to the subwoofer using the speaker cables.


Connect the DVD Player to the subwoofer using the included A/V Cable.

- When connecting the included A/V Cable, match the colored connections with the colored ports (*White to white, red to red, and yellow to yellow*).

 Connect the Video Connection to a television or other display.

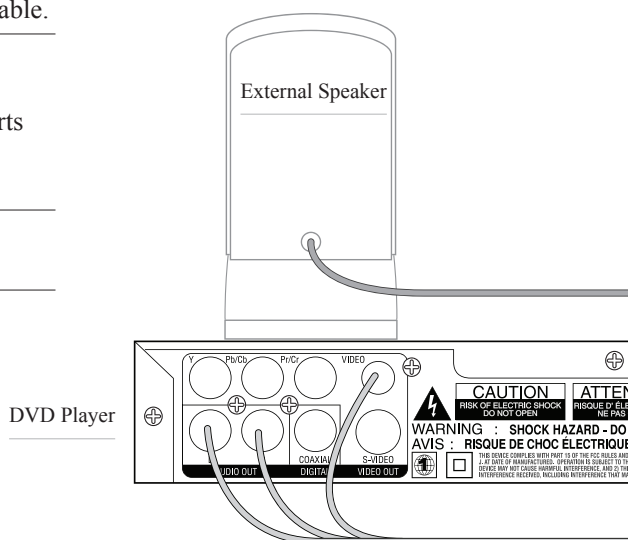

 Connecting the Speaker System/DVD Player

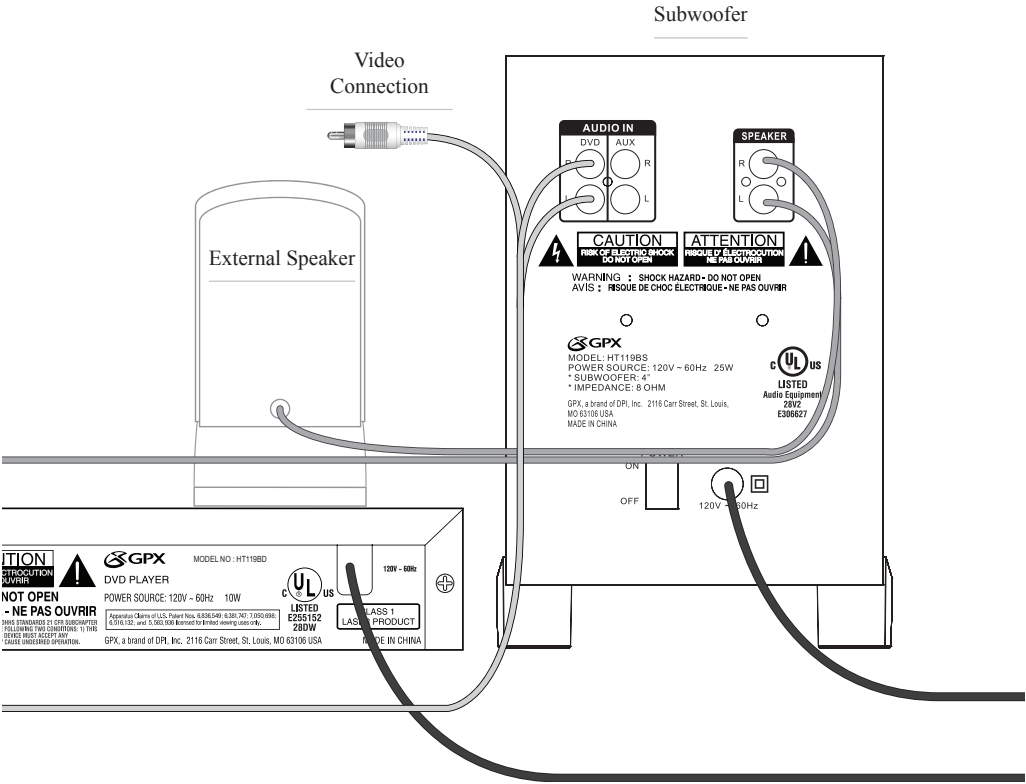

Composite Video Output

When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)

Step 1: Connect the RCA Cable to the **Audio Outputs** and **Composite Video Output** on the unit to the audio/video inputs on the Television

Step 2: Turn the unit on by pressing the **Power Button**.

Step 3: Change the television to the correct audio/video input setting.

Step 4: Change the *Video Output* setting on the unit to YUV.

Step 5: Audio and video played through the unit will now be seen and heard on the connected television.

- *Press the Video button on the remote control to cycle through S-Video, YUV, and P-Scan.*
-

S-Video Output

When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)

Step 1: Connect an S-Video Cable (not included) to the **S-Video Output** on the unit and the S-Video Input on the Television.

Step 2: Connect the RCA Cable to the **Audio Outputs** on the unit to the audio/video inputs on the Television.

Step 3: Turn the unit on by pressing the **Power Button**.

Step 4: Change the *Video Output* setting on the unit to S-Video.

Step 5: Change the television to the correct audio/video input setting.

Step 6: Video played through the unit will now be seen on the Television.

- *Press the Video button on the remote control to cycle through S-Video, YUV, and P-Scan.*
-

Component Video Output

When connecting two products using an Component Cable, match the colored ports with the same colored connection. (Green to Green, Red to Red, and Blue to Blue)

- Step 1:** Connect a Component Cable (not included) to the **Component Video Outputs** on the unit and the component video inputs on the Television
 - Step 2:** Connect the RCA Cable to the **Audio Outputs** on the unit to the audio/video inputs on the Television.
 - Step 3:** Turn the unit on by pressing the **Power Button**.
 - Step 4:** Change the *Video Output* setting on the unit to YUV P-Scan.
 - Step 5:** Change the television to the correct video input setting.
 - Step 6:** Video played through the unit will now be seen on the connected television.
 - *Press the Video button on the remote control to cycle through S-Video, YUV, and P-Scan.*
-

Coaxial Audio Output

When connecting two products using an RCA Cable, match the colored ports with the same colored connection. (Red to Red, White to White, and Yellow to Yellow)

- Step 1:** Connect an RCA Cable (included) to the **Coaxial Audio Output** on the unit and the coaxial audio input on a surround sound system.
 - Step 2:** Turn the unit on by pressing the **Power Button**.
 - Step 3:** Change the stereo system to the correct audio input setting.
 - Step 4:** Audio played through the unit will now be heard on the connected television or stereo system.
-

Programming a DVD or CD

Step 1: Press the **Power Button** to turn the unit on. The **Power Indicator** will illuminate green when the unit is turned on.

Step 2: Insert a DVD or CD into the **CD/DVD Drawer**.

Step 3: After the CD/DVD loads, press the **PROG Button** on the remote.

Step 4: For DVD, in the column with “Title”, select the title number. In the column with “Chapter”, select the chapter number.

- *For CD, in the column with “Track”, select the track numbers in the order they are to be played.*
-

Step 5: After all of the desired titles and chapters, or tracks are programmed, press the **Play Button** to begin playing the programmed tracks.

Step 6: To cancel a program, press the **Stop Button** twice.

Setup Menu

To enter the setup menu, press the **Setup Button** on the remote control.

- *To access all of the features in the setup menu, the unit must be in full stop mode. (Press the **Stop Button** twice to enter full stop mode)*

Language Setup

OSD

Select to adjust the On-Screen Display language.

Menu

Select to adjust the Menu language.

Audio

Select to adjust the Audio language.

Subtitle

Select to adjust the Subtitle language.

Screen Setup

TV Type

Select to adjust the aspect ratio of the DVD player to 4:3PS, 4:3LB, or 16:9.

Screen Saver

Select to turn the Screen Saver off or on.

TV System

Select to adjust the TV System to NTSC, PAL, or Auto.

Video Output

Select to adjust the Video Output to CVBS+S-Video, CVBS+YUV, or YUV P-Scan.

Audio Setup

Digital Out

Select to adjust the Digital Output to SPDIF/PCM, SPDIF/RAW, or Off.

Down Mix

Select to adjust the Down Mix to Lo/Ro or Lt/Rt.

Custom Setup

Angle Mark

Select to turn the Angle Mark on or off.

 
Default

Select to restore the unit to its original settings.

Style

Select to adjust the color style of the setup menu.

Locations of Controls

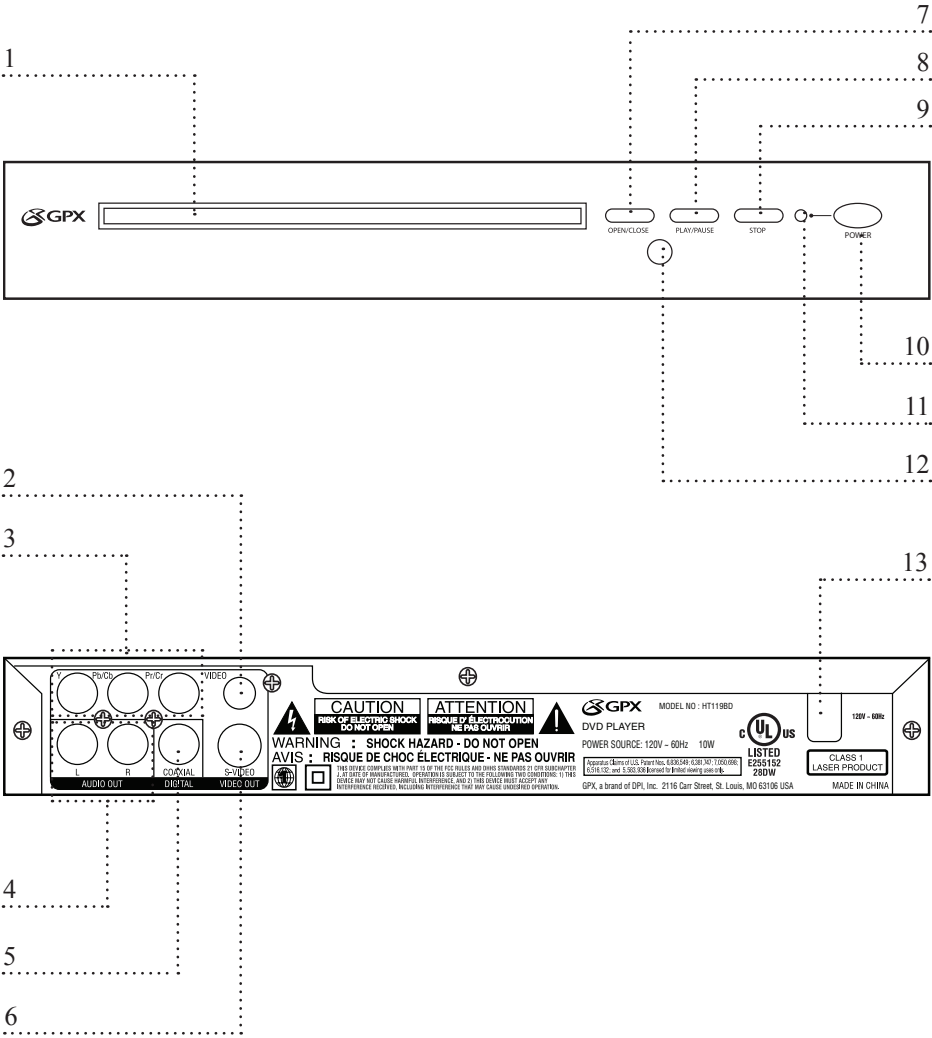

Control Definitions

1. **CD/DVD Drawer**
Use the CD/DVD Drawer to load DVD, CD, and CD-R/RW discs.

2. **Composite Video Output**
Use the Video Output connection to send a composite video signal from the unit to a TV. (Requires an RCA Cable, included)

3. **Component Video Output**
Connect the Component Outputs to send the best video signal from the unit to a TV. (Requires a Component Cable, not included)
 - *The Component Outputs must be connected to activate the progressive scan feature.*

4. **Audio Output**
Use the AUDIO OUT port to connect the unit to the included speaker system.

5. **Coaxial Output**
The COAXIAL Output is an advanced audio output which allows the digital audio signal to be sent to a surround sound receiver for multichannel and surround sound audio.

6. **S-Video Output**
Use the S-Video Output connection to send a higher quality standard video signal to the TV. (Requires an S-Video cable, not included)

7. **Open/Close Button**
Press the Open/Close Button to open or close the CD/DVD Drawer

8. **Play/Pause Button**
Press the Play/Pause Button to play or pause a CD or DVD.

9. **Stop Button**
Press the Stop Button to stop a DVD or CD during play.

 
10. **Power Button**
Press the Power Button to turn the unit off and on.

11. **Power Indicator**
The Power Indicator illuminates red when the unit is turned off. The Power Indicator illuminates green when the unit is turned on.

12. **Infrared Receiver**
The Infrared Receiver receives signals sent from the remote control.

13. **AC Cord**
Plug the attached AC Cord into a standard AC outlet (120V~60Hz) to power the unit.

Locations of Controls

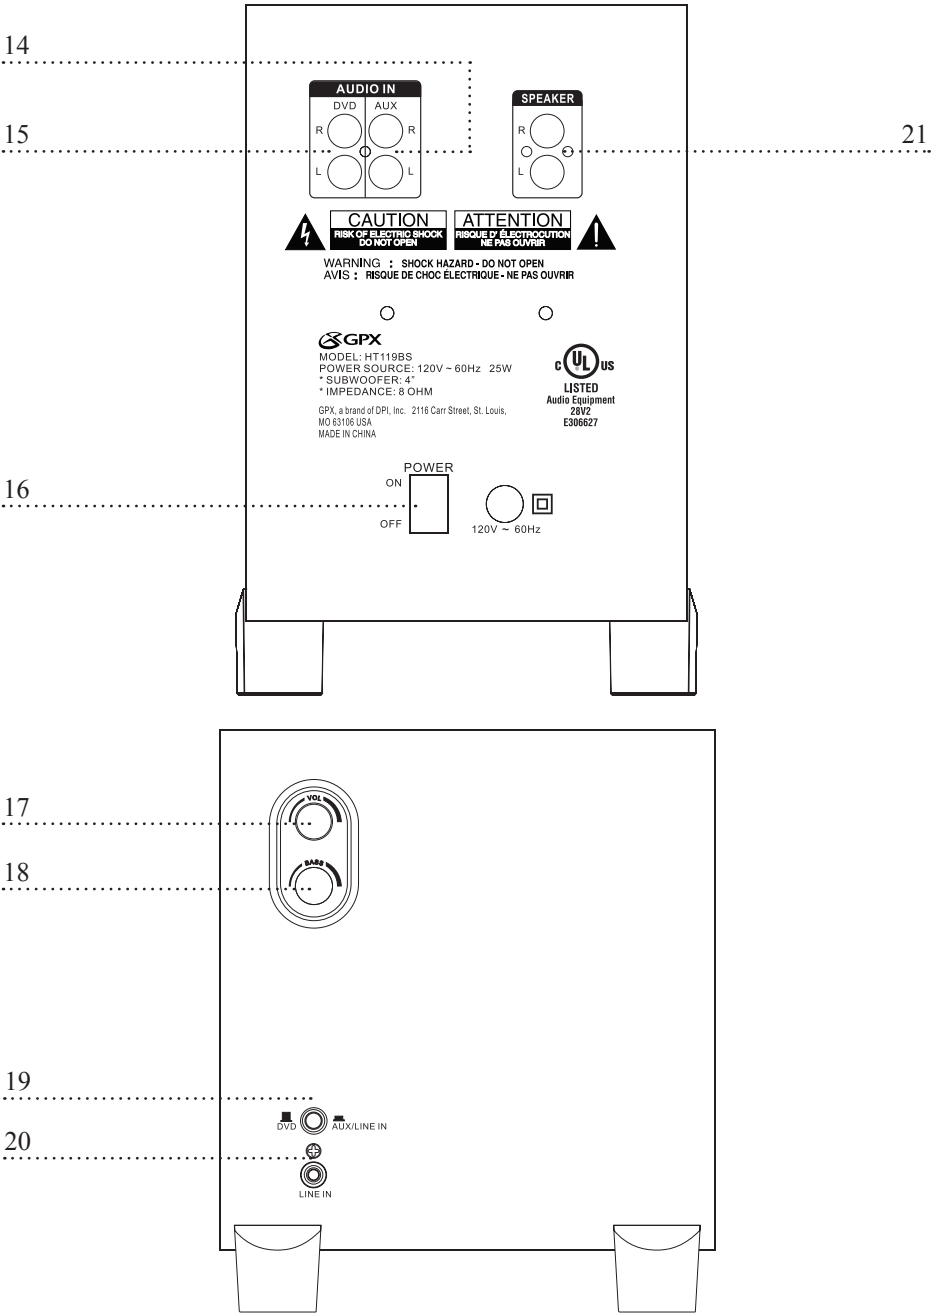

Control Definitions

14. Auxiliary Input

Use the Auxiliary Input to connect an external audio source to the unit's speaker system.

Please note, when the Line Input is connected to the unit, the Auxiliary Input will be deactivated.

15. DVD Audio Input

Use the DVD Audio Input to connect the DVD player to the speaker system.

16. Power Switch

Press the Power Switch to turn the speaker system on or off.

17. Volume Dial

Turn the Volume Dial to adjust the volume of audio output from the speaker system.

18. Bass Dial

Turn the Bass Dial to adjust the level of bass output from the speaker system.

19. Source Button

Press the Source Button to switch between *DVD Player Mode* and *Auxiliary Mode*.

Please note, when the Line Input is connected to the unit, the Auxiliary Input will be deactivated.

20. Line Input

 
Use the Line Input to connect an external audio source, such as an MP3 player, to the unit's speaker system.

Please note, when the Line Input is connected to the unit, the Auxiliary Input will be deactivated.

21. Speaker Connections

Use the Speaker Connections to connect the unit's speakers to the subwoofer.

Locations of Controls

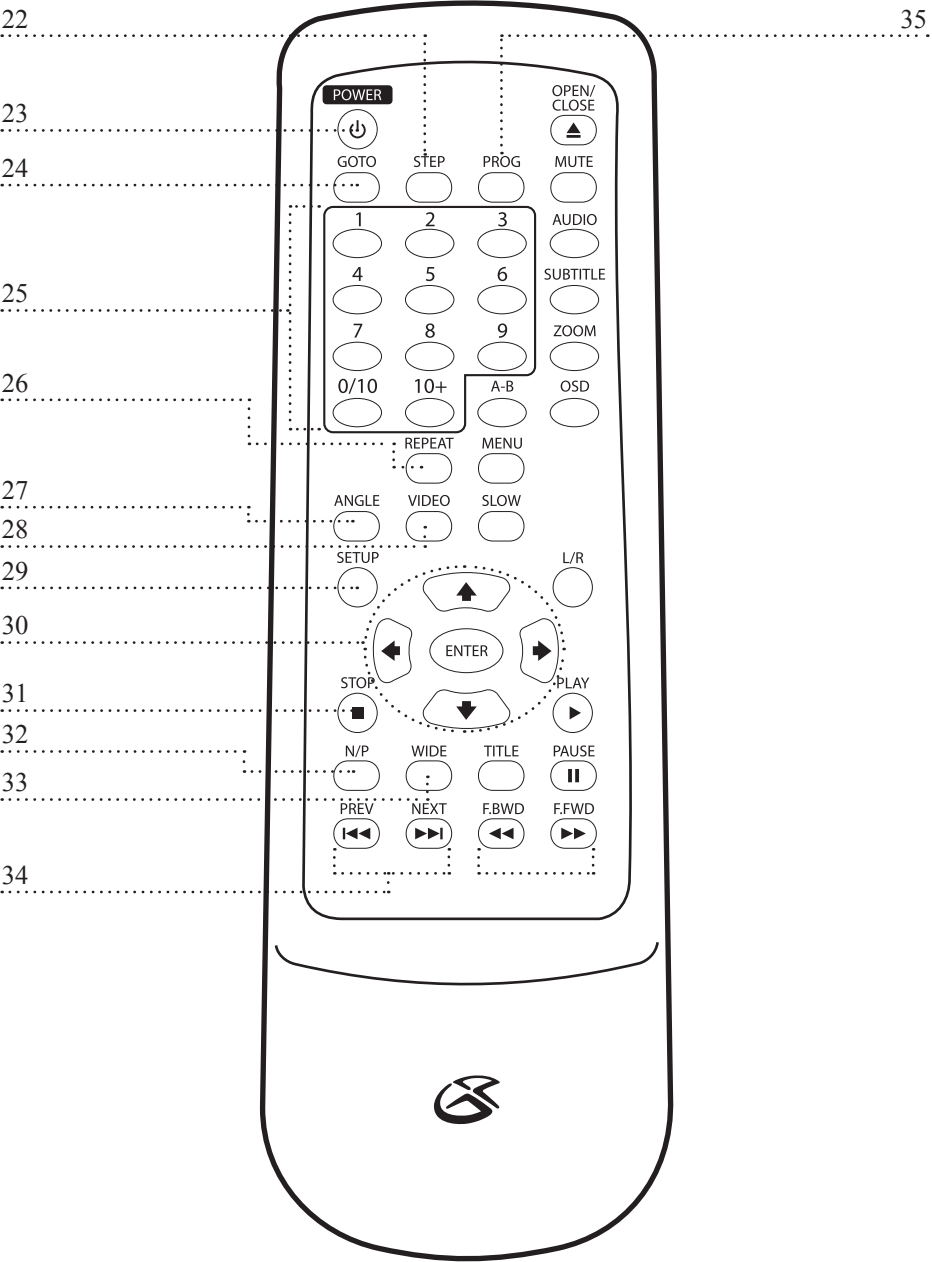

Control Definitions

22. Step Button

Press the STEP button to pause a DVD movie, and press it consecutively after the movie is paused to move forwards through the movie one frame at a time.

23. Power Button

Press the Power Button to turn the unit off and on.

24. GOTO Button

Press the GOTO Button to quickly switch between DVD chapters, or enter a time and instantly go to the selected time of a DVD.

25. Number Keypad

Use the Number Keypad when programming a CD or DVD.

26. Repeat Button

Press the Repeat Button to switch between Repeat Chapter, and Repeat Title on a DVD, or Repeat Track, and Repeat All for a CD or JPEG CD.

27. Angle Button

The Angle Button works with special DVDs to adjust to alternate angles while watching.

28. Video Button

Press the Video Button to switch between S-Video, YUV (Composite Video Output), or P-Scan (Component Video Outputs).

29. Setup Button

Press the Setup Button to display the DVD Player's setup menu.

30. Navigation Controls / Enter Button

The Navigation buttons (Up, Down, Right, Left) and the ENTER button are used for navigating the DVD Player's internal menus and the DVD movie menus.

31. Stop Button

Press the Stop Button to stop a DVD or CD during play.

32. N/P

Press the N/P Button to switch between NTSC and PAL TV modes.

33. Wide Button

Press the Wide Button to switch the Aspect Ratio between 4:3 Pan Scan, 4:3 Letter Box, Screenfit or Zoomfit.

• *The WIDE button will only work when the unit is in stop mode.*

 
34. PREV/NEXT Buttons

Press the PREV/NEXT Buttons to skip to the previous or next track or chapter on a CD or DVD.

35. PROG Button

Press the PROG (Program) Button to set a play order for a DVD's chapters or a CD's tracks.

Locations of Controls

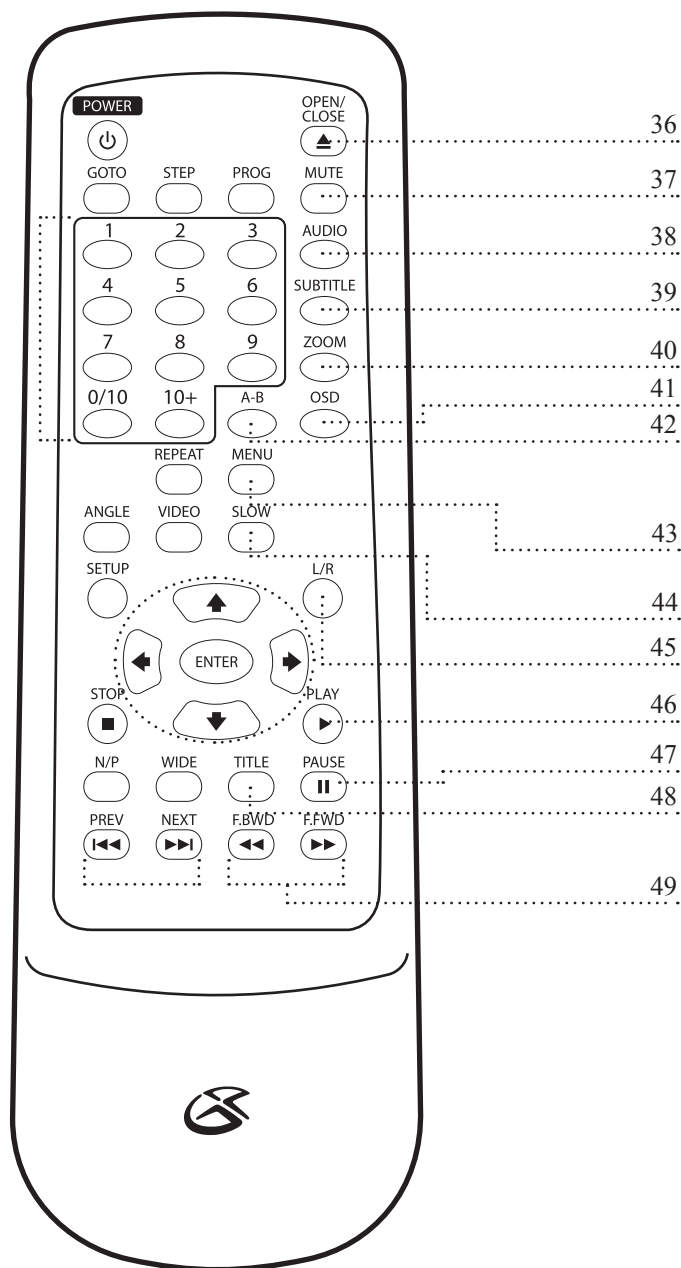

Control Definitions

- 36. Open/Close Button**
Press the Open/Close Button to open or close the CD/DVD Drawer
-
- 37. Mute Button**
Press the Mute Button to mute the audio output from the unit.
-
- 38. Audio Button**
Press the Audio Button to adjust the DVD's audio language.
-
- 39. Subtitle Button**
Press the Subtitle Button to turn the subtitles on or off, and to adjust between different subtitle languages.
-
- 40. Zoom Button**
Press the Zoom Button consecutively to turn the zoom feature on and off.
-
- 41. OSD Button**
Press the OSD (On Screen Display) Button to show the Time, Title, Chapter, Audio Language, Subtitle Setting, and Angle settings of a DVD.
-
- 42. A-B Button**
Press the A-B Button once to mark a starting point during a DVD. Press the button a second time to mark an ending point. After doing so the DVD will loop that section of video. Press the button a third time to cancel this function.
-
- 43. Menu Button**
Press the Menu Button to see the menu of the DVD disc in the player.
-
- 44. SLOW**
Press the SLOW button to activate and deactivate the Slow Motion feature while playing a DVD.
-
- 45. L/R Button**
Press the L/R button to switch the audio output between the left speaker, right speaker, or all speakers.
-
- 46. Play Button**
Press the Play Button to play a load CD or DVD.
-
- 47. Pause Button**
Press the Pause Button to pause a CD or DVD during play.
-
- 48. Title Button**
Press the Title Button to see the Title Menu on a DVD.
-
- 49. F.BWD/F.FWD Button**
Press the F.FWD Button to skip to the next chapter, track, or image on a DVD, CD, or JPEG CD. Press and hold the F. FWD Button to fast-forward through an individual chapter or track on a DVD or CD. Press the F.BWD Button to skip to the previous chapter, track, or image on a DVD, CD, or JPEG CD. Press and hold the F.BWD button to search backwards through an individual chapter or track on a DVD or CD.



Parts Information

Address: 2116 Carr Street, St. Louis MO, 63106
Phone: 1-314-621-2881
Fax: 1-314-588-1805
Email: partsinfo@dpi-global.com

Service Information

Address: 2116 Carr Street, St. Louis MO, 63106
Phone: 1-314-621-2881
Fax: 1-314-588-1805
Email: prodinfo@gpx.com
Website: www.gpx.com
Version: v. 121208

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.ilive.net.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.ilive.net.